

**Rakuten kobo**

**kobo** remote

User Guide

# Table of Contents


About your Kobo Remote.....	3
Features and How to Use your Kobo Remote.....	3
Activate your Kobo Remote .....	5
Pair your Kobo Remote with your Kobo eReader .....	5
Battery Information.....	6
Troubleshooting your Kobo Remote.....	7
Kobo Remote Specifications .....	7
Specifications Featured.....	7
Need help?.....	8
Safety, Regulatory and Warranty Information.....	8

## About your Kobo Remote

### Features and How to Use your Kobo Remote

Kobo Remote allows you to effortlessly turn pages on your Kobo eReader with a simple press of a button, once paired the Kobo Remote provides convenient control over your Kobo eReader. Its front buttons allow you to easily navigate forward and backwards through your eBook pages.

On the top, a dedicated pairing button connects the remote to your eReader, with an LED indicator showing pairing status (blinking blue for pairing mode, unblinking for paired).

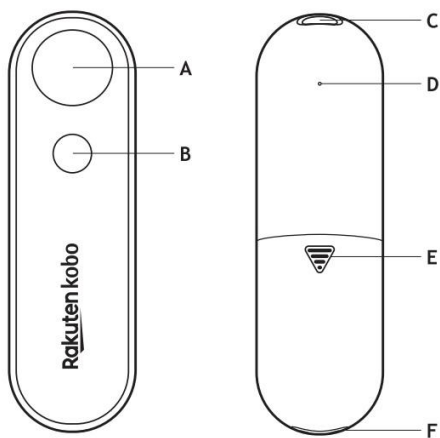

- **(A) Forward Button:** Use this button to navigate forward through your eBook pages.
- **(B) Backward button:** Use this button to navigate backward through your eBook pages.
- **(C) Pairing button:** Use to connect your Kobo Remote to your eReader
- **(D) LED light indicator:** Shows the pairing and battery status:
  - **Fast blinking blue:** Pairing mode
  - **Slow Blinking blue:** Reconnecting
  - **Unblinking light:** Paired mode
- **(E) Battery compartment access:** Push and slide to access battery compartment.
- **(F) Lanyard Slot.**

## Activate your Kobo Remote

---

Before you use your Kobo Remote for the first time, you will need to remove the pull tab at the bottom of the Kobo Remote.

If you haven't used your Kobo Remote for a long time and it is not responsive, you should try to [replace the battery](#).

## Pair your Kobo Remote with your Kobo eReader


---

### **Pairing Mode:**

1. Long press the pairing button for 3 seconds to enter pairing mode. A Fast-blinking blue light will indicate the Kobo Remote is in pairing mode
2. On your Kobo eReader:
  - Go to More Setting
  - Bluetooth Connection > then turn on Bluetooth.
3. On your Kobo eReader, look for Kobo Remote and select it to pair.
4. On your Kobo eReader, KOBO REMOTE will display "Connected".
5. Once Paired, the light on your Kobo Remote will stop blinking.

## Battery Information

---

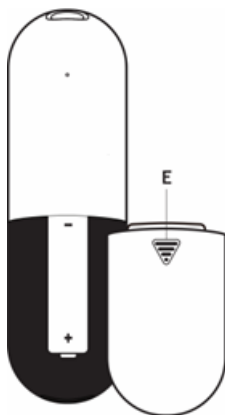

### Replacing the Battery

1. Push and slide the back cover off (E)
2. Replace the battery (AAA Batteries)
3. Slide back the back cover

### Battery Status

- Check battery level through your eReader's Bluetooth settings

## Troubleshooting your Kobo Remote

---

- Turn off Bluetooth on your device, then turn it back on.
- If the Kobo Remote was paired before, choose to Forget/Remove on your device and clear the pairing memory if needed.
- Replace the battery (install fresh AAA batteries if required).
- Re-pair the Kobo Remote with your Kobo eReader.

## Kobo Remote Specifications

### Specifications Featured

---

- Compatible with Bluetooth enabled Kobo eReaders.
- Bluetooth wireless connection.

## Need help?

To get help and learn more about your eReader and other Rakuten Kobo products, visit: <https://help.kobo.com>

## Safety, Regulatory and Warranty Information

Important safety, regulatory and warranty details about your Kobo Remote can be found on the Kobo website at:

- <https://help.kobo.com>
- [www.kobo.com/userguides](http://www.kobo.com/userguides)